 
Using the Dalek

 Once the Dalek is plugged in press the power button on the battery pack until you hear a beep



3. Press the source button to scroll to the correct channel

-DVD player: Composite Video

-Computer: VGA-A

Press the tick to select the channel you want

4. Adjust the volume using the large knob on the left, you may also need to press the power button _____





